

***PhotoFast* CR-3100**

Dual Slot SD(HC) to MS Pro Duo Adapter for PSP 2000/3000

Specifications:

- ◆ Supported SD: 256MB - 2GB
- ◆ Supported SDHC: 4GB - 32GB
- ◆ Maximum capacity: 64GB
- ◆ Operation Temperature: 0C to +70C
- ◆ Storage Temperature: -25C to +85C
- ◆ Dimensions: 72mm x 72mm x 25.5mm
- ◆ Weight: 2g

Features:

- ◆ **Holds 2 cards for super large capacity**
CR-3100 converts 2 SD(HC) into one MS Pro Duo stick.
- ◆ **Card types can be mixed**
Cards of different capacity and different type can be used concurrently (i.e. SD + SDHC).
- ◆ **Freedom of expansion and upgrade**
CR-3100 works with only 1 SD(HC) card as well. The second slot can be equipped anytime later.
- ◆ **Super high read/write speeds of 10MB/s up**
CR-3100 is made of high quality components and preserves the original speed of the inserted SD(HC) cards. When two different types of SD(HC) cards are used, the slower card sets the speed rate.
- ◆ CE, FCC certified
- ◆ RoHS compliant
- ◆ Designed in Japan
- ◆ Assembled in Taiwan
- ◆ 2 Years Warranty

How to use:

◆ **Get started**

Before using CR-3100 the first time, SD(HC) card(s) needs to be inserted into the Adapter and formatted in the PSP.

◆ **Using only 1 SD(HC) card**

If only 1 SD(HC) card is used, it needs to be inserted into slot#1.

◆ **Data transfer**

Data transfer can only be done with SD(HC) card(s) inserted in CR-3100. Direct PC-to-SD(HC) card transfer and then inserting into CR-3100 won't work.

◆ **Re-using SD(HC) card(s)**

 
If the inserted and formatted SD(HC) card(s) should be re-used in any other device (such as a Digital Camera), the specific SD(HC) card needs to be formatted in slot#1 while slot#2 must be empty.

◆ **Compatibility**


CR-3100 is fully compatible to Sony PSP 2000/3000, however, PSP 1000 is not supported.

CR-3100 setup instructions :


1. Turn off the PSP. Insert the MS Pro Duo connector plug in the PSP memory slot (located on the right side of the PSP).

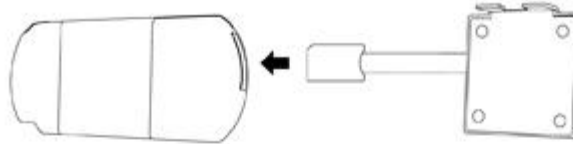

 2. Mount the CR-3100 on the back of the PSP.

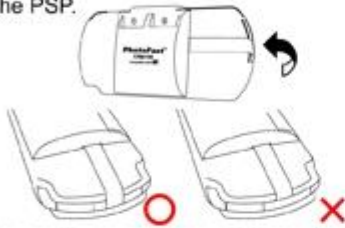


 3. Fix the CR-3100 with the 2 screws (included) and make sure the adapter sits tight.

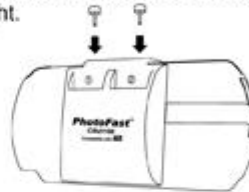

4. If only 1 SD(HC) card is used, it must be inserted in slot #1. When using new SD(HC) cards, you need to insert the cards in CR-3100 and format with your PSP before storing/transferring data.

 Always turn off the PSP before removing cards from the slots, or when unmounting CR-3100.

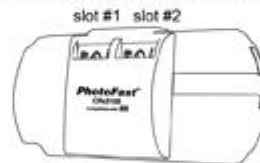

DO NOT EXCHANGE CARDS BETWEEN SLOTS! THIS CAN CORRUPT YOUR DATA! MARK WHICH CARD BELONGS INTO WHICH SLOT BEFORE REMOVING! If cards are exchanged between slots, PSP can't read the data. This is indicated by a flashing light. If you are not sure which card belonged into which slot, set the write-protection switch on both SD(HC) cards to "Lock". This is a safe way to find the previous order.

2 ways of data transfer :

- a.) connect PSP with your PC via PSP USB slot (USB cable required)

- b.) connect CR-3100 with your PC: insert MS Pro Duo connector plug in PC card reader Note①: Data transfer can only be done with cards inserted in CR-3100. Direct PC-to-card data transfer and then inserting in CR-3100 won't work.

Note②: Re-using your SDHC cards for other devices than CR-3100:

Should you experience formatting problems (i.e. only half of the original capacity available), please format concerned SDHC card(s) in slot #1 of CR-3100 (slot #2 must be empty). Do this for every affected card. Now you can re-use your SDHC card(s) in other devices.

